

## Automatic Air Vent

(N 05 345)



## Features and benefits

- Construction Features
  - brass body
  - maximum operating pressure: 16 bar
  - maximum operating temperature: +110 °C
  - air outlet: 1/4" flare connection
  - check valve attachment provides cost savings and increases convenience
- Installation and Maintenance
  - Automatic Air Vents should be installed vertically in the highest point of the system, after flushing all the debris
  - for the first use turn the cap (anti-clockwise) for quick filling
  - carry out regular inspections and do not remove the cap during operation
  - maintenance needs to be carried out only when the system is cold

Part No.	D (")
DMAAV38	3/8
DMAAV12	1/2
DMAAV34	3/4